

System Initialization

◀ ▶ Power Switch 18

Manual Playing

In any mode except for Level Adjusting (with the rhythm playing)

Instrument Key or Instrument Key

Accent Key (To add accent)

20

Mode Setting

With the rhythm stopped

MODE →

- ↓ Song Playing
- ↓ Pattern Playing
- ↓ Song Writing
- ↓ Step Writing
- ↓ Tap Writing

Tempo Adjustment

In any mode except for Step Writing or Trigger In

TEMPO → ◀ or ▶ 26

Adjusting Instrument/Accent Level

LEVEL → Instrument Key or Accent Key

Select the Instrument / Accent to be Level-adjusted

◀ or ▶ 24

Song Selection

In Song Playing Mode (with the rhythm stopped)

Number Key (1 - 8) 27

Pattern Selection

In any mode except for Song Playing

Number Key Number Key (11 - 88) 32

Start, Stop and Continue-Start

Start Stop Continue Start

START STOP/CONT STOP/CONT 22

Song Clear

In Song Writing Mode (with the rhythm stopped)

SHIFT 5 ACC/ENTER 35

Pattern Clear (1)

In Step Writing or Tap Writing Mode (with the rhythm stopped)

SHIFT 5 ACC/ENTER 51

Pattern Clear (2) [Clearing the individual instrument voice]

In Tap Writing Mode (with the rhythm playing)

SHIFT 5 ACC/ENTER 54

* The drum sound in each step will be erased one by one by pressing the Enter Key.

Step Number Selection (12 or 16 steps)

In Step Writing or Tap Writing (with the rhythm stopped)

SHIFT 6 ACC/ENTER 48

Song Playing

In Song Playing mode.

- Select a Song

Number Key (1 - 8)
- Play the Song
 - Starting from the first bar

START
 - Starting from the middle of the Song
 - Select the bar

In any mode except Tempo/Level Adjusting (with the rhythm stopped)

◀ or ▶
 - Continue-Start

STOP/CONT

27

Song Repeat

In Song Playing Mode (with the rhythm stopped)

SHIFT 4 ACC/ENTER 28

Song Chain

In Song Playing Mode (with the rhythm stopped)

SHIFT 8 ACC/ENTER 29

* Song 1 cannot be set.

Pattern Playing

In Pattern Playing Mode (with the rhythm stopped or running)

- Select a Pattern.

Number Key Number Key (11 - 88)
- Start the rhythm.

START

32

Song Writing

In Song writing Mode

- Clear the date previously written in the selected Song

With the rhythm stopped

SHIFT 5 ACC/ENTER
- Start the rhythm (if you wish to monitor).

START
- Select a Pattern.

Number Key Number Key (11 - 88)
- Write the Pattern.

ACC/ENTER
- Repeat steps 3 and 4.
- Stop the rhythm (if you have been monitoring)

STOP/CONT

33

Song Edit

In Song write Mode

- Select the bar that contains a wrong Pattern.

In any mode except for Tempo/Level Adjusting (with the rhythm stopped)

◀ or ▶
- Select the correct Pattern.

Number Key Number Key (11 - 88)
- Write the correct Pattern

ACC/ENTER

* Step 3 can be done even with the rhythm playing.

38